

User manual DConXo




This two-channel XLR output panel converts Dante audio to analog. Its compact and sleek design allows it to fit snugly into junction boxes, ensuring a clean and professional installation. DConXo offers seamless connectivity between digital Dante networks and traditional analog audio systems

After connecting the unit to your network with Power over Ethernet supplied the unit should be visible and patchable in Dante Controller.

Dante Controller can be downloaded from the Audinate Dante website:


www.getdante.com

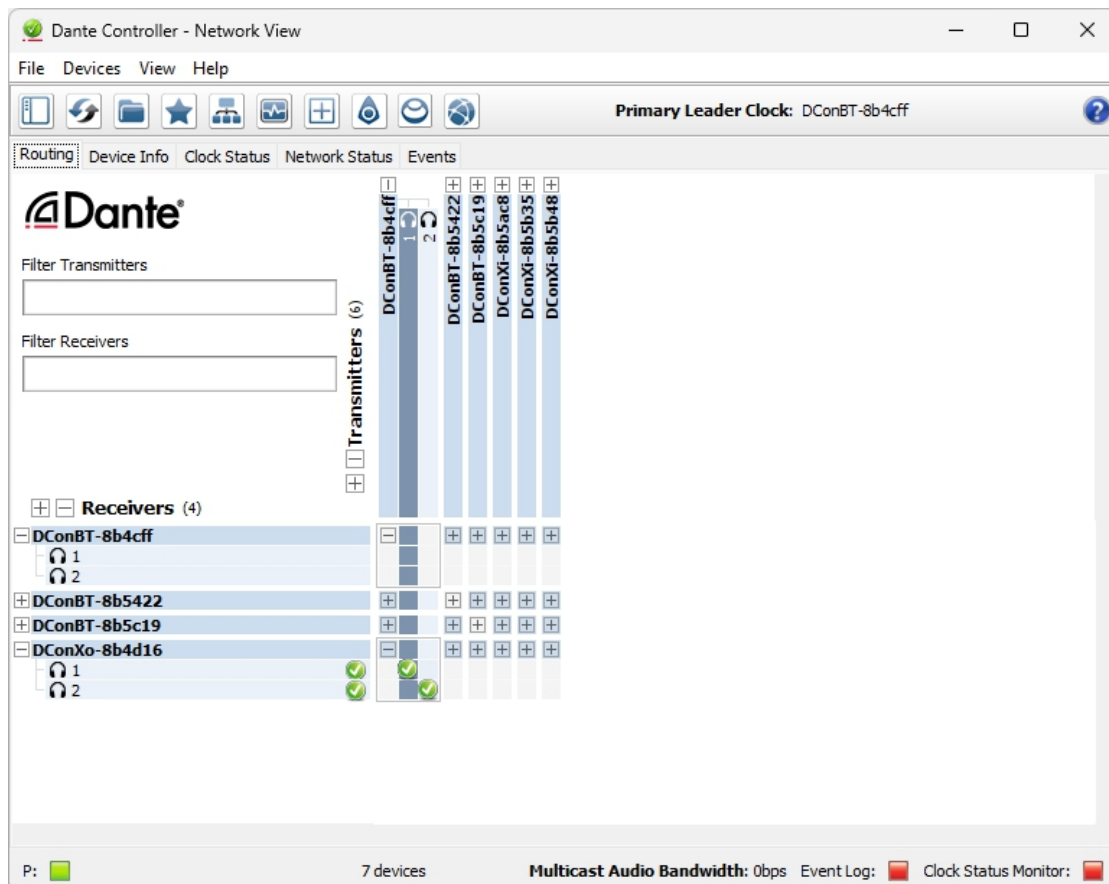

IP Settings

IP Settings are made in Dante Controller.

1. Double click a device in the matrix or press Ctrl+D on your keyboard to open Device View.
2. Select the Dante device you wish to edit and navigate to the Network Config tab.

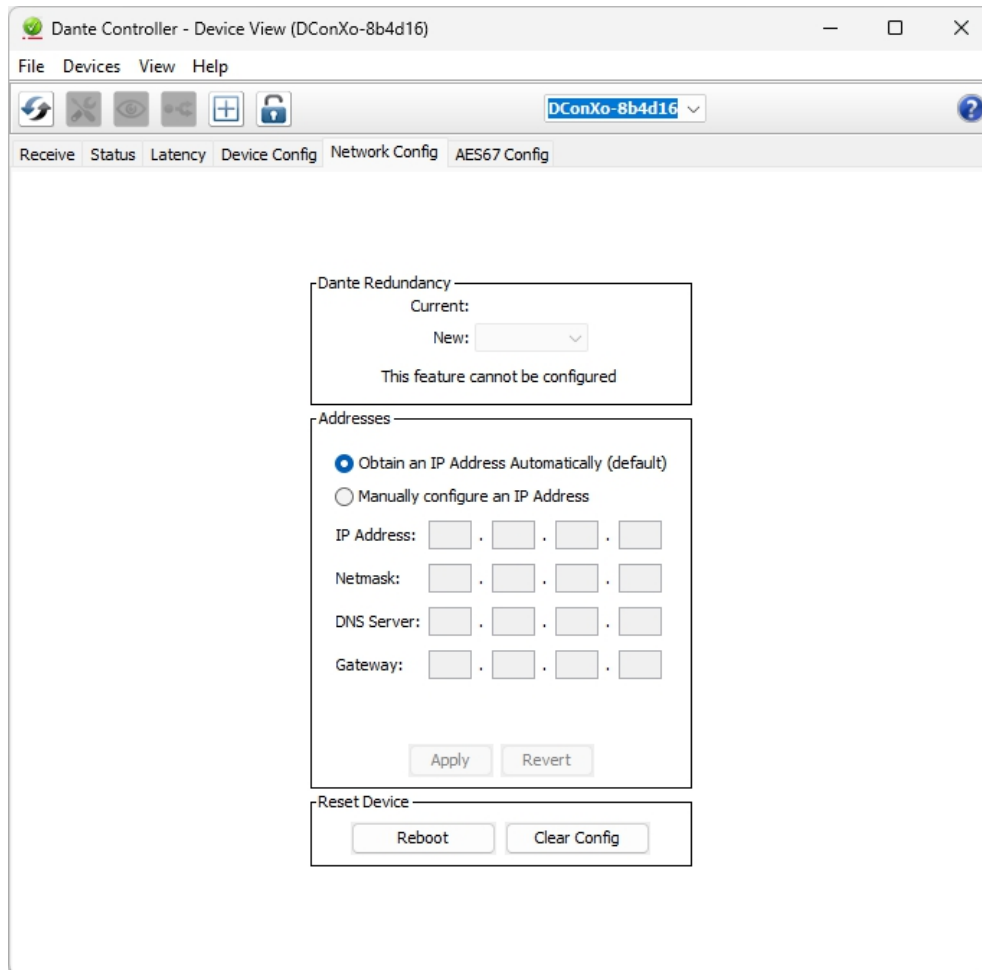

For other Dante related settings please refer to the information supplied by Audinate. Completing Dante training and certification is highly recommended to set up and work with Dante audio-over-network installations.

For latest product information, visit our website:

www.newhank.com