

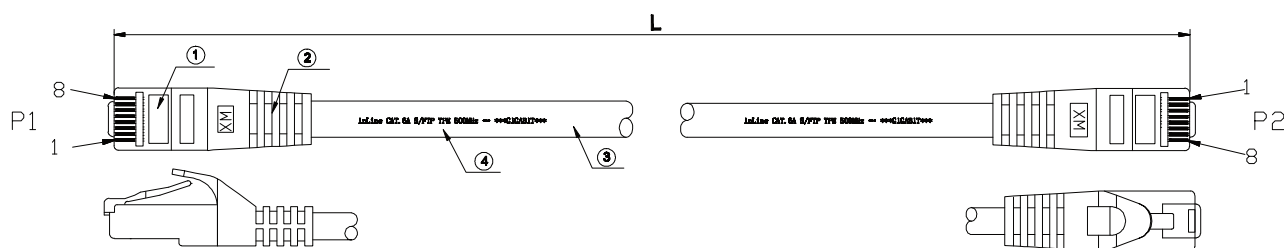


Datasheet

Cat.6A S/FTP TPE Flexible

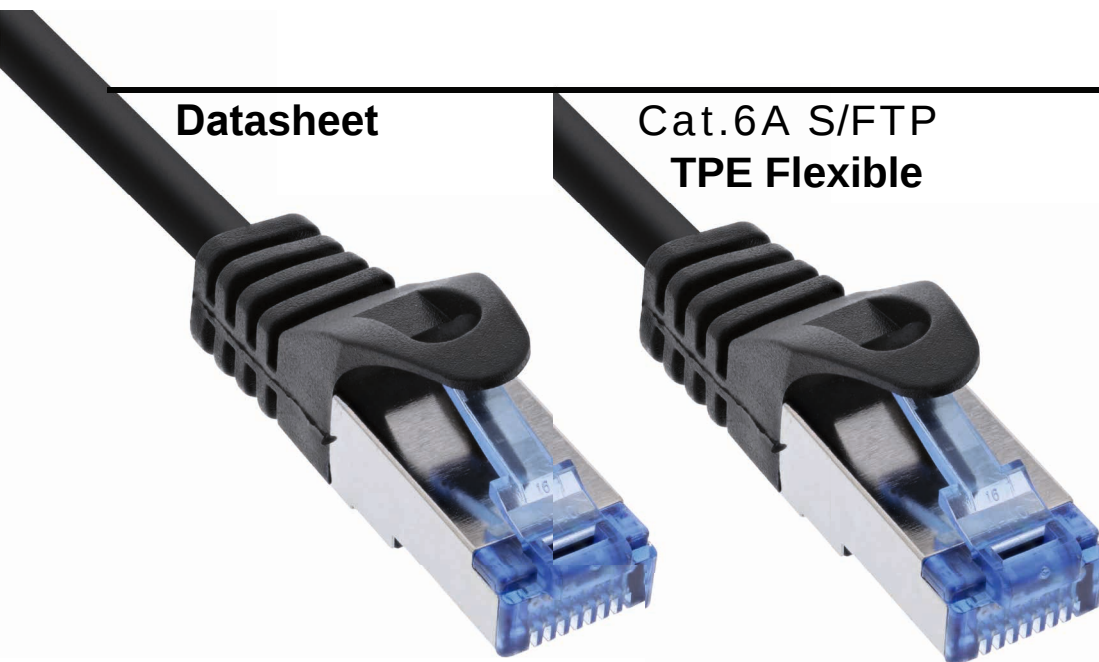

⑥	PACKAGE	InLine PE SELF SEALING BAG	1
④	PRINTING	InLine CAT.6A S/FTP TPE 500MHz ISO/IEC 11801 & EN 50173-1 & ANSI/TIA-568-C.2 ***GIGABIT***	
③	CABLE	S/FTP CAT. 6A (26AWG BC*1P+AL-FOIL)*4PAIRS+Braid AL-MG+CABLE JACKET: TPE/HALOGEN FREE, OD=6.2±0.2MM	1
②	MOLD HOOD	PVC, 75A	2
①	CONNECTOR	RJ45 8P8C PIN GOLD PLATED 3U", THE SHELL PLATED NICKEL, COLOR: TRANSPARENT BLUE	2
No.	PART NAME	DESCRIPTION	QTY

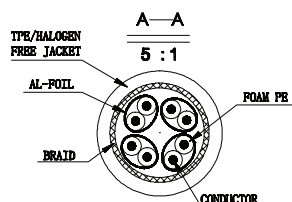

PIN OUT (568B-568B)			
P1		P2	
1	WHITE	1	WHITE
2	ORANGE	2	ORANGE
3	WHITE	3	WHITE
4	GREEN	4	GREEN
5	BLUE	5	BLUE
6	WHITE	6	WHITE
7	WHITE	7	WHITE
8	BROWN	8	BROWN
SHELL	BRAID	SHELL	BRAID

- Cat.6A patch cable
- S/FTP (PiMf) shielding, pairs in metal foil shielded with braid overall screen
- Cable with TPE sheath, halogen free
- Flexible cable, resistant
- provides super small bending radius to till min.10mm
- RJ45 plug on both sides, with blue-transparent dyed plastic
- Gold plated contacts, 750 cycles min.
- 4x2xAWG26 full copper strands
- Assignment 1:1, according to T568B
- Supports POE/POE+
- In reclosable PE bag with EAN code