MIPRO®

Extension Speaker User Guide

Extension Speaker

Thank you for choosing MIPRO MA-707-EXP Extension Speaker. Please take the time to read these instructions carefully so that you can achieve the best performance from the system.

The MA-707-EXP is an Extension Speaker of MA-707, housed in a heavy duty, ergonomically designed case. It features a retractable handle and sturdy wheels for ease of transport.

1. Features:


Front



- **1 Retractable Handle:** Push up from underneath the handle to expose the retractable extension. Simply push down again for storage and lifting.
- **2 Fixed Carry Handle:** For balanced, easy hand carrying.
- **Microphone Storage Compartment:** A handy storage compartment for 2 handheld or bodypack transmitters.

- **4 Speaker:** A powerful, 8-inch full-range speaker.
- **5 Speaker Grille:** To protect the speaker cone from damage.
- **6 Heat Sink:** Designed specially for the built-in amplifier, please keep it adequately ventilated.
- **Tripod (Optional):** There is a tripod mating socket mounted in the base of the MA-707 to accommodate a 35mm tripod stand.

Back

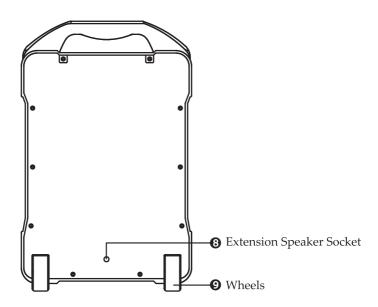

- **8** Extension Speaker Socket: Allows you to connect an optional MA-707-EXP extension speaker for increased directional coverage.
- **9** Wheels: Heavy duty and a truly user friendly feature.

2. Note:

The MA-707-EXP extension speaker is rated at 60 watts @ 4 ohms. Please take care not to short out the speaker cables otherwise unwarranted damage could be done to the system amplifier.



MIPRO Electronics Co., Ltd

Headquarters: No. 814, Beigang Rd., Chiayi City 600079, Taiwan Tel: +886.5.238.0809 Fax: +886.5.238.0803 www.mipro.com.tw mipro@mipro.com.tw



All rights reserved. YM 021/09

Do not copy or forward without prior approvals of MIPRO.

Specifications and design subject to change without notice.



2CE059B